

Digital Voltage Tester

Read Before Usel Instructions

It Is Necessary To Completely Read This Before Use.

Features

This Meter Can Be Used To Directly Or Indirectly Test DC Or AC Voltage From 12v To 220v And



Grounding And Broken Line As Well. Direct Measurement: Note:

Electric-Net Work Is Dangerous To Life!

1. In General The Last Displayed Value Is The True One.

2. The Value Displayed, If The Measured Value Is 70% Of The Actual One Only, Should Be The Lower Range Of The Peak Value..

3. When Measuring Contact The Metal Terminal With The Phase Line, The Symbol "5" Will Be Shown On The Lcd, Then

Contact It With "Direct Test" Panel, The Voltage Will Be Shown On Lcd, Uyer Will See Fig.1 And Fig.2) Awhen Measuring For DC (Such As Vehicle Batteries), Have With Finger And The Other Contacted With

Other Contacted With The Meter (Direct Test) Note:

Electric-Network Is Dangerous To Life!

Indirect Measurement: Measuring Broken Line, Contact The Metal Terminal With The Isolation Of The Phase Line And The "Indirect Test" Pole, The Symbol "\$" Will Appear On The Lcd. It Will Disappear If There Is A Broken Line.



5 029594 281652



