


## Operating instructions

Please retain for future reference.

1. Adjustment knob
2. Operating handle
3. Handle Lock
4. Staple tray
5. Staple supply tab
6. Staple retainer
7. Staple use indicator.

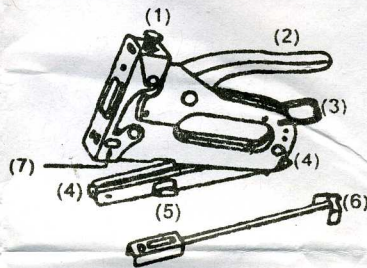


1 Push staple retainer(6) forwards to disengage catch. Then withdraw retainer.

2

a. STAPLE

b. ROUND STAPLE

c. NAIL

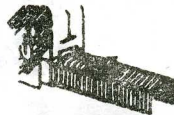


Place staples in supply tray (4) and refit the staple retainer(6).



The tab at the rear of the stapler can be used to remove staples.



The force used to insert the staple/ nail can be adjusted by using the adjustment knob (1). Turning the knob clockwise will increase the pressure.

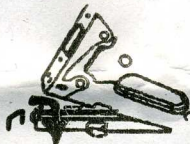

To clean the grooves in the supply tray  
Push staple retainer(6) forwards to disengage catch. Then withdraw retainer.  
Pull the two supply tray tabs(5) backwards and draw the tray down. The tray can then be cleared of any obstructions.

### CAUTION:

- Do not point or fire the staple gun at any person or object other than the work piece.
- When the staple gun is not in use, press down the handle and lock it using the handle lock. Do not point the gun at any persons while locking the handle.
- Keep the staple gun out of reach of children.